


END PULL - BACK FIXING TEMPLATE

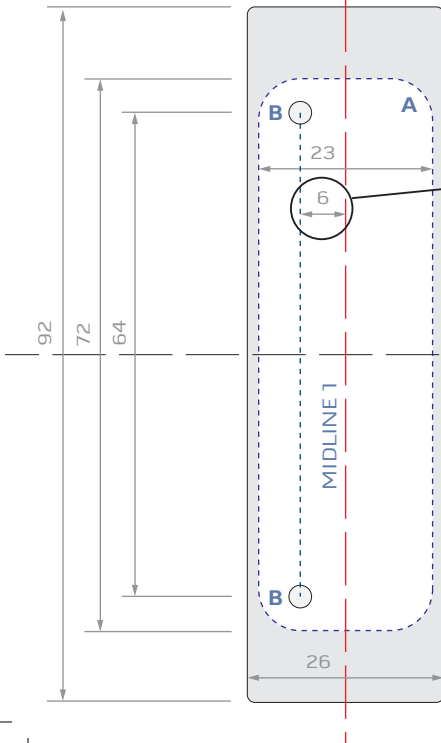

ATTENTION! screw holes are not centre aligned

Screw hole centres are offset by 6mm. Use this template to ensure accurate fitment into cabinetry.

MIDLINE 2

Cutting Details

Mark cutting using Midlines for accurate reference.

A. Remove middle section of template. Place template in position using midlines and mark outline. Cut 12mm rebate

B. Place middle section of template back into rebate and drill two 4.5mm holes for screws.